NL Handleiding 90% open tent





- 1. Elastische binder (2x)
- 2. Drukknop (6x) + Schroef (6x)
- 3. Voor beugel + bout, ring, dopmoer(2x)
- 4. Koordhouder (3x) + schroef (3x)
- 5. Zij beugel (2x) + schroef (4x)
- 6. 90% open tent



Midden


25,00

Stap 1: Gaten boren

Teken de gaten af volgens de afbeelding hiernaast en boor de gaten Ø5,00 mm.

TIP: Plaats een blok hout achter het te boren gat om splijten van het hout te voorkomen. Verf de

 binnenkant van de geboorde gaten om het hout goed te beschermen.





Stap 2: Monteer de voorste beugel

Monteer de voorste beugel met de bijgeleverde bouten, ringen en moeren op het voorpaneel van de

Stap 3: Monteer de zijbeugels (onderkant)

  De onderkant van de zijbeugels wordt tussen de bank en de bak geplaatst. Het wordt gemonteerd met bestaande schroeven die ook dienst doen als scharnier (3.1) voor de bank.





Stap 4: Monteer de zijbeugels (boven)

Voordat u de schroeven aanbrengt, lijnt u de bovenkant van de zijbeugel horizontaal uit en boort u twee gaten voor met een diameter van Ø2,00 mm om te voorkomen dat het hout barst.

Stap 5: Plaats fiberstokken van de tent in beugels Steek de gebogen fiberstokken in de corresponderende beugels.





800051H-06

Handleiding 90% open tent





Stap 6: Plaatsing van de voorste knoppen Houd de voorkant van de tent rond de bak en markeer de positie van de drukknoop aan beide

zijden.

Stap 7: Monteer de voorste knoppen

Monteer de knoppen aan de voorkant met de meegeleverde schroeven en klik de tent vast.





Stap 8: Monteer de elastische binders Bevestig de elastische binders aan de achterkant van de tent door ze door de tent zelf te halen.


Stap 9: Positionering van de koordhouders Trek de tent recht aan de achterkant en markeer de positie van de koordhouders.





Stap 10: Monteer de koordhouders

 Monteer de koordhouders met de bijgeleverde schroeven. Span nu de elastische binders over de houders om ze vast te zetten.



Trek de tent lichtjes op zijn plaats en markeer de positie van de knoppen aan beide zijden van de bak.



Stap 12: Monteer de zijknoppen

Zet de knoppen aan de zijkant vast met de meegeleverde schroeven.





800051H-06

Manual 90% open tent





- 1. Elastic strap (2x)
- 2. Snap buttons (6x) + screw (6x)
- 3. Front bracket + bolt, washer, cap nut (2x)
- 4. Strap holder (3x) + screw (3x)
- 5. Side bracket (2x) + screw (4x)
- 6. 90% open tent

 


Middle

Step 1: Drill holes

Mark out the holes as shown in the image on the right and drill the Ø5.00 mm holes.

TIP: Place a block of wood behind the hole to be drilled to avoid splitting the wood. Paint the inside of the drilled holes to protect the wood well.





Step 2: Mount the front bracket

Mount the front bracket on the front panel of the box using the bolts, washers and nuts provided.

Step 3: Mount the side brackets (bottom)

  The bottom of the side brackets is placed between the bench and the box. It is mounted with existing screws that also act as hinges (3.1) for the bench.





Step 4: Mount the side brackets (top)

Before attaching the screws, align the top of the side bracket horizontally and pre-drill two Ø2.00 mm holes to prevent the wood from cracking.

Step 5: Place tent fibre poles in brackets Insert the bended fibre sticks into the corresponding brackets.







Manual 90% open tent





Step 6: Positioning of the front buttons Hold the front of the tent around the box and mark the position of the snaps on both sides.

Step 7: Mount the front buttons Mount the front buttons with the screws provided and click the tent in place.





Step 8: Mount the elastic straps Attach the elastic straps to the back of the tent by passing them through the tent itself.

Step 9: Positioning of strap holders Pull the tent straight at the back and mark the position of the strap holders.





Step 10: Mount the strap holders Mount the strap holders with the screws provided. Now stretch the elastic straps over the holders to secure them.

Step 11: Positioning the side buttons Lightly pull the tent into place and mark the position of the buttons on both sides of the box.



Step 12: Mount the side buttons Screw the side buttons in place with the screws provided.



800051H-06

