


Onderdelen


1. Veiligheidsgordel (2x)
2. Bout M6x20, Ring M6, Moer M6(4x)

Opmerking: De andere benodigde onderdelen moeten worden hergebruikt van de bestaande banken.

Stap 1: De bestaande banken verwijderen

Verwijder de twee bestaande banken en hun steunen. Alle onderdelen behalve de bank worden hergebruikt.

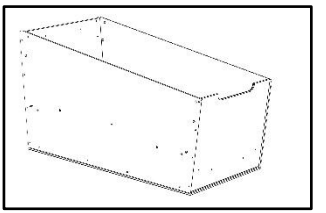

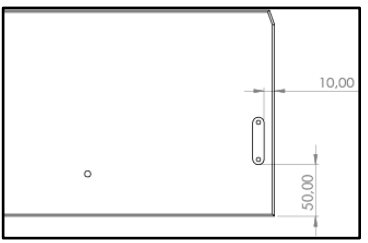



Stap 2: Vervang de magneetstrip

De magneetstrips (+ schroeven) van de bestaande bankjes worden hergebruikt op de nieuwe bankjes. Zorg ervoor dat ze aan de juiste kant van het bankje worden geplaatst, zie de afbeelding hierboven.

Stap 3: Gaten boren (voorkant)

Boor 4 gaten met een diameter van 6,5 mm en 2 gaten met een diameter van 4 mm in de voorkant van de bak.

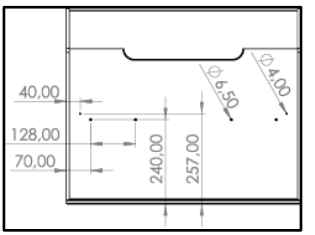

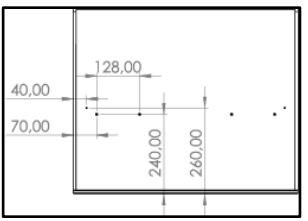



Stap 4: Boorgaten (achterkant)

Boor 4 gaten met een diameter van 6,5 mm en 2 gaten met een diameter van 4 mm in de achterkant van de doos.

Stap 5: Monteer de banksteunen

Monteer de 4 banksteunen in de bak met de bestaande bouten en moeren. De steun met de magneet moet aan de voorkant worden gemonteerd.

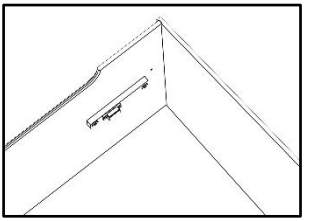

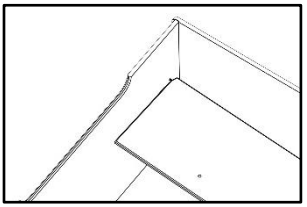



Stap 6: De banken monteren

Monteer de twee nieuwe banken met de bestaande schroeven.

Stap 7: Boor gaten en monteer de veiligheidsgordels

Boor 3 gaten op één lijn met de gaten in de bank op ongeveer 50 mm van de bovenkant met een diameter van 6 mm.

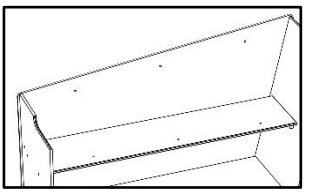

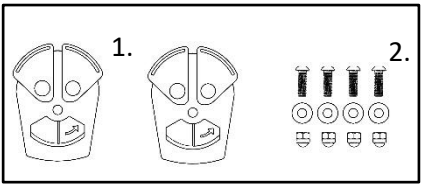


Parts


3. Seatbelt (2x)
4. Bolt M6x20, Washer M6, Nut M6(4x)

Note: The other parts needed have to reused from the existing benches.

Step 1: Remove the existing benches

Remove the two existing benches and their supports. All the parts except the bench will be reused.

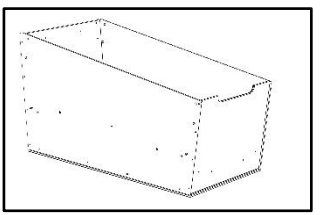

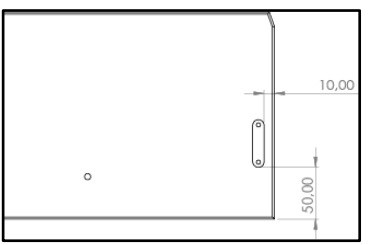



Step 2: Replace the magnet strip

The magnet strips (+ screws) from the existing benches will be reused on the new benches. Make sure they are placed on the correct side of the bench, see the illustration above.

Step 3: Drill holes (frontside)

Drill 4 hole with a diameter of 6,5 mm and 2 holes with a diameter of 4 mm in the front of the box.

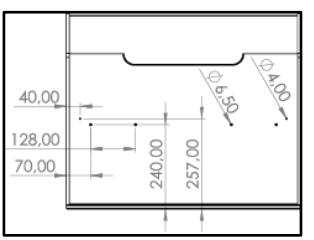

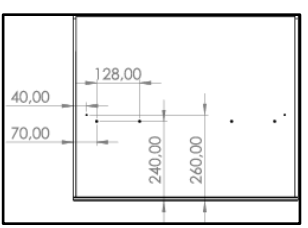



Step 4: Drill holes (backside)

Drill 4 holes with a diameter of 6,5 mm and 2 holes with a diameter of 4 mm in the backside of the box.

Step 5: Mount the bench supports

Mount the 4 bench supports in the box with the existing bolts and nuts. The support with the magnet needs to be mounted in the front.

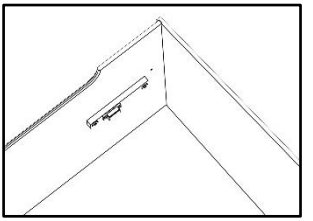

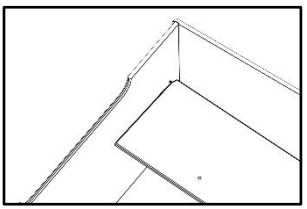

Step 6: Mount the benches

Mount the two new benches with the existing screws.

Step 7: Drill holes and mount the seatbelts

Drill 3 holes aligned with the holes in the bench approximately 50 mm from the top with a diameter of 6 mm.

