

1. Vul strip (2x)
2. Buiten strip (2x)
3. Hoekprofielen (3x, verschillend)
4. Handgreep (1x)
5. M6 bouten, moeren en ringen
6. Lak
7. Lijm

Stap 1: Afmeten



Leg een vul strip op de zijkant van de bak en meet vanaf de achterkant van de bak 25cm tot de strip. **Let op:** Verder naar achteren plaatsen geeft problemen met het bankje.




Stap 2: Aftekenen

Trek met een marker een lijn langs de buitenkant van de vul strip.

Stap 3: Uitzagen




Gebruik voor het zagen van het luik een decoupeerzaag met een zaagje van 2mm. Een zaagje met fijne vertanding geeft een beter resultaat. Vijl waar nodig bij voor een mooie afwerking.

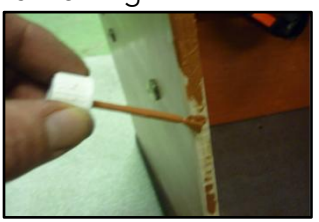

Stap 4: Lakken

Gebruik de lak om de gezaagde oppervlaktes te beschermen.

Let op: Laat de lak wel goed drogen.

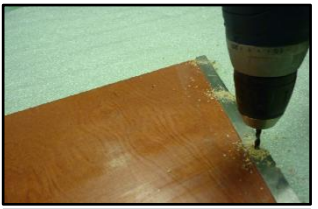



Stap 5: Gaten boren

Klem een vul strip op het luik en boor de gaten door in het hout, gebruik hiervoor een 6mm boor.



Stap 6: Monteren van de strips

Gebruik de meegeleverde bouten, moeren en ringen om de strips te monteren aan het luik. De vul strips moeten tussen het luik en de buiten strips komen te zitten. Dit aan beide kanten.

Stap 7: Monteren van de hoekprofielen

Plaats nu de hoekprofielen in de bak. Deze zijn alle drie anders dus het is belangrijk dat alles goed past, alvorens ze vastgelijmd worden met de meegeleverde lijm.




Stap 8: Monteren van de handgreep

Klem het blokje hout aan de binnenkant van het luik en boor de twee 6mm gaten door. Bevestig het blokje met de meegeleverde bouten en moeren.



Stap 9: Slot gat

Wanneer gewenst kunt u het gat dat in de buiten strips zit doorboren en kunt u hier een slot plaatsen tegen diefstal van het luik.

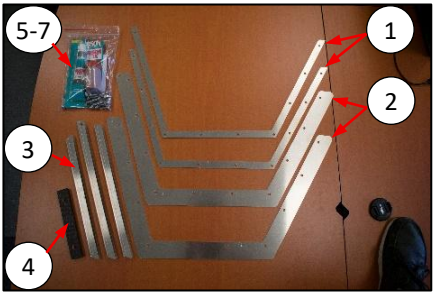

1. Filler strip (2x)
2. Outer strip (2x)
3. Corner profiles (3x, various)
4. Handle (1x)
5. M6 bolts, nuts and washers
6. Paint
7. Glue

Step 1: Measuring

Place a filler strip on the side of the box and measure from the back of the box 25cm to the strip. **Note:** Placing further back will cause problems with the bench.






Step 2: Marking off

Using a marker, draw a line along the outside of the filler strip.

Step 3: Sawing out


To cut the hatch, use a jigsaw with a 2-mm blade. A saw with fine teeth gives better results. File where necessary for a nice finish.



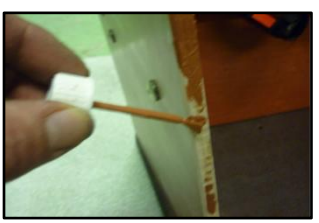

Step 4: Painting

Use paint to protect the sawn surfaces.
Note: Do allow the paint to dry thoroughly.

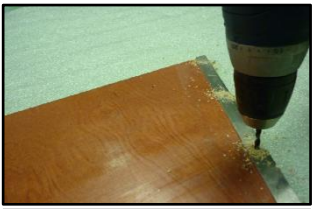



Stap 5: Drilling holes

Clamp a filler strip onto the hatch and drill the holes through into the wood, use a 6mm drill bit.

Stap 6: Mounting the strips

Use the provided bolts, nuts and washers to mount the strips to the hatch. The filler strips should sit between the hatch and the outer strips. This on both sides.



Stap 7: Mounting the corner profiles

Now place the corner profiles in the box. All three of these are different so it is important that everything fits properly before gluing them in place with the glue provided.

Stap 8: Mounting the handle

Clamp the block of wood to the inside of the hatch and drill through the two 6mm holes. Fasten the block with the bolts and nuts provided.





Stap 9: Lock hole

If desired, you can drill the hole that is in the outer strips and you can place a lock here to prevent theft of the hatch.