


# 1 Manual for closeable box Beneath bench

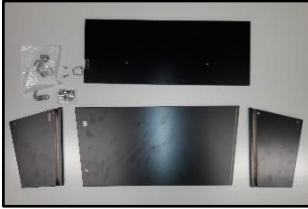

## Parts overview

1. Support plates (L and R)
2. Front panel with lock
3. Bench with stainless bracket
4. Screws

## Step 1: Disassembly old bench

Remove the existing bench and both support slats. Also unbolt the seatbelts from the bench.

**Note:** To install the new bench, the original bolts have to be reused.



## Step 2: Mounting lock

Install the sliding lock on the left support plates with the four small screws.

**Note:** The left support plate can be recognized by the carved slot.

## Step 3: Mounting support plates

Place the left and right support plates in the box and secure them with the original bolts.




## Step 4: Fitting the front panel

In case of a long box, this can be skipped. In the case of a short box, the front panel has to be shortened by sawing of the indicated length.

**Note:** If a fine toothed sawblade is used, splintering will be minimized.

## 2 Manual for closeable box Beneath bench

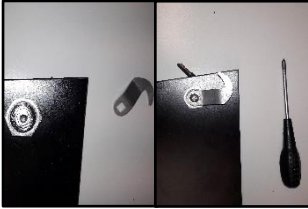

### Step 5: Assemble the lock

Mount the lock to the front panel, the latch hook mount to the lock on the backside of the front panel.

**Note:** Make sure the latch hook is in the "open" position.

### Step 6: Mount the bracket

Mount the stainless locking bracket to the bench with the supplied screws



### Step 7: Assemble the bench

Place the bench in the box and secure it with the original screws to the original holes in the box.

**Note:** The closeable box is not meant to store precious items.

Azor and Bakfiets.nl cannot be held responsible for theft or damage caused by the use of the closeable box.